

DS3478-SF202145WR

SPECIAL OPERATING INSTRUCTIONS

symbol[®]
The Enterprise Mobility Company[™]

The DS3478-SF202145WR differs from the standard in the following ways.

MicroPDF Replacement Characters

For MicroPDF bar codes, replace certain characters with the replacement characters shown in the table below.

Table 1-1 *Replacement Characters*

Original Character	Replacement Character
GS (1D hex)	'^' (5E hex)
RS (1E hex)	'!' (21 hex)
EOT (04 hex)	'?' (3F hex)


Custom Parameters

Parameter	Standard Default	Custom Default
MicroPDF	Disabled	Enabled

New Parameters

Parameter	Options	Default
Replace MicroPDF Characters	Enable/Disable	Enable

Parameters

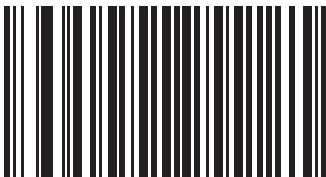

Replace MicroPDF Characters Disabled



Replace MicroPDF Characters Enabled

Service Information

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Symbol Global Customer Interaction Center.

Locate Symbol Global Customer Interaction Centers by visiting:

www.symbol.com/contactsupport.

For the latest version of Symbol guides go to:

<http://www.symbol.com/manuals>.



73E-72109-145WR
Revision A - July 2006
Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, N.Y. 11742-1300
<http://www.symbol.com>