

**DS3478-SF202145WR**

**SPECIAL OPERATING INSTRUCTIONS**

***symbol***<sup>®</sup>  
*The Enterprise Mobility Company*<sup>™</sup>

The DS3478-SF202145WR differs from the standard in the following ways.

## MicroPDF Replacement Characters

For MicroPDF bar codes, replace certain characters with the replacement characters shown in the table below.

**Table 1-1** *Replacement Characters*

Original Character	Replacement Character
GS (1D hex)	'^' (5E hex)
RS (1E hex)	'!' (21 hex)
EOT (04 hex)	'?' (3F hex)


## Custom Parameters

Parameter	Standard Default	Custom Default
MicroPDF	Disabled	Enabled

## New Parameters

Parameter	Options	Default
Replace MicroPDF Characters	Enable/Disable	Enable

## Parameters

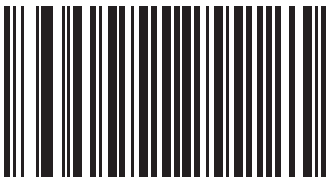

**Replace MicroPDF Characters Disabled**



**Replace MicroPDF Characters Enabled**

## Service Information

Before you use the unit, it must be configured to operate in your facility's network and run your applications.

If you have a problem running your unit or using your equipment, contact your facility's Technical or Systems Support. If there is a problem with the equipment, they will contact the Symbol Global Customer Interaction Center.

Locate Symbol Global Customer Interaction Centers by visiting:

[www.symbol.com/contactsupport](http://www.symbol.com/contactsupport).

For the latest version of Symbol guides go to:

<http://www.symbol.com/manuals>.



73E-72109-145WR  
Revision A - July 2006  
Symbol Technologies, Inc.  
One Symbol Plaza  
Holtsville, N.Y. 11742-1300  
<http://www.symbol.com>